PREMIER®

***MANUAL DE INSTRUCCIONES***
**COJIN MASAJEADOR**
**MC-4140C**

***ESTIMADO CLIENTE***
Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***



**PRECAUCIÓN**

RIESGO DE CHOQUE ELÉCTRICO , NO ABRA

Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.

Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad que constituye un riesgo de choque eléctrico.

Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

***LÍNEAS DE SERVICIO AL CLIENTE PREMIER***

| | |
|---|---|
| **Venezuela:** | 0800 – ELECTRIC (353-2874) |
| **Colombia:** | 01-900-331-PEJC (7352) |
| **Panamá:** | 300-5185 |
| **Sitio Web:** | www.premiermundo.com |
| **E-mail:** | servicioalcliente@premiermundo.com |

**NOTA**
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de esta unidad sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

## INSTRUCCIONES DE SEGURIDAD

Conserve este manual para futuras referencias y siga atentamente las indicaciones en el descritas.

- Si el cable de energía se encuentra dañado, este debe ser reemplazado por un agente calificado, con el fin de evitar lesiones.
- Antes de conectar la unidad al tomacorriente, verifique que el voltaje del área corresponde con el voltaje requerido por la unidad.
- Esta unidad no debe ser usada por niños o personas enfermas sin supervisión.
- Asegúrese que los niños no jueguen con la unidad.
- No use esta unidad en exteriores
- Desconecte la unidad antes de realizar limpieza, reparación o de cambiar la unidad de lugar.
- Cuando la unidad de sea usada, apáguela y desconéctela del tomacorriente.
- Con el fin de evitar choques eléctricos, evite operar la unidad con las manos mojadas, no la sumerja en agua o en cualquier otro liquido y evite derramar líquidos en su interior.
- No inserte objetos dentro de la unidad.
- No pliegue o dañe el cable de energía.
- Una instalación inadecuada puede causar riesgo de incendio, choques eléctricos ó lesiones personales.
- El fabricante no se responsabiliza por cualquier daño causado por el uso inadecuado de la unidad.
- No intente reparar la unidad usted mismo, remita todo arreglo ó mantenimiento a personal de servicio técnico.
- Evite limpiar la unidad con químicos, detergentes fuertes ó esponjas abrasivas.
- Esta unidad ha sido diseñada para uso en interiores únicamente.
- No use esta unidad cerca de líquidos (Cocinas, baños, canillas, etc).
- No use esta unidad con un cable de extensión, a menos que este haya sido revisado por personal técnico calificado.
- Si tiene problemas de salud, consulte a su medico antes de usar la unidad.
- Personas con marcapasos deben consultar con su medico antes de usar la unidad.
- Nunca cubra la unidad mientras esta este siendo usada.
- Uno uso excesivo de la unidad puede acortar su vida útil debido al sobrecalentamiento. Si la unidad se recalienta, permita que se enfríe completamente antes de usarla nuevamente.
- Esta unidad es una aplicación no profesional diseñada para realizar suaves masajes a sus músculos.
- No use esta unidad como un sustituto para atención medica.
- No use la unidad antes de acostarse. Esta unidad tiene un efecto estimulante y puede retrasar el sueño.
- No use la unidad mientras duerme
- Esta unidad no debe ser usada por personas con capacidades físicas o mentales reducidas.
- No use la unidad si se ha mojado.
- No use la unidad cuando este plegada.





## INSTRUCCIONES DE INSTALACIÓN

**NOTA:**

- No use la unidad en el baño o en zonas húmedas, ya que se puede reducir la vida útil de la unidad
- Evite exponer la unidad a los rayos directos del sol, o fuentes de calor.
- No use la unidad sobre superficies de madera, ya que la cremallera puede causar daños.

### SISTEMA DE CORREAS

La unidad cuenta con un sistema único de correas el cual le permite ajustarla a casi cualquier silla. Coloque la unidad en la silla a ajuste las correas elásticas firmemente a la silla. La unidad no se moverá, se quedara estática.

### USO EN EL HOGAR O EN LA OFICINA

Conecte el cable de energía a un tomacorriente AC 110V. Use la unidad cuando lea, descanse ó incluso mientras trabaja.

### USO EN EL VEHÍCULO

Simplemente conecte el adaptador de auto 12V al conector de cigarrillos. Coloque la unidad en la silla de su auto, apriétela y empiece a disfrutar de un relajante masaje mientras conduce.

## ESPECIFICACIONES

Entrada: 12VDC 800MA
Potencia: 8.5V (Cuando usa el adaptador AC)

## USO DE LA UNIDAD Y DEL CONTROL REMOTO

**Botón de calor**: Enciende / Apaga el calentador lumbar

**Botón de potencia**: Enciende / Apaga la unidad

**Botón de intensidad**: ajusta la potencia del masaje. Hay 3 niveles de intensidad

**Botón de modo:** Hay 4 modos de masaje: Vibrar, Golpear suavemente, Ondas, Amasar y modo Auto.

**Aislar el masaje:** Personalice las áreas de masaje, escogiendo las áreas que desea masajear: Superior, Espalda, parte baja de la espalda, caderas y muslos.

**Botón de temporizador:** Elija entre 15min, 30min y 60min





## LIMPIEZA Y MANTENIMIENTO

- Desconecte la unidad y permita que se enfríe antes de limpiarla.
- Límpiela con un paño suave ligeramente humedecido. No permita que el agua entra en contacto con la unidad
- No sumerja la unidad en agua o en cualquier otro liquido.
- No use limpiadores abrasivos, cepillos, gasolina, tiner, etc, para limpiar la unidad.

## DIAGRAMA DE CIRCUITOS

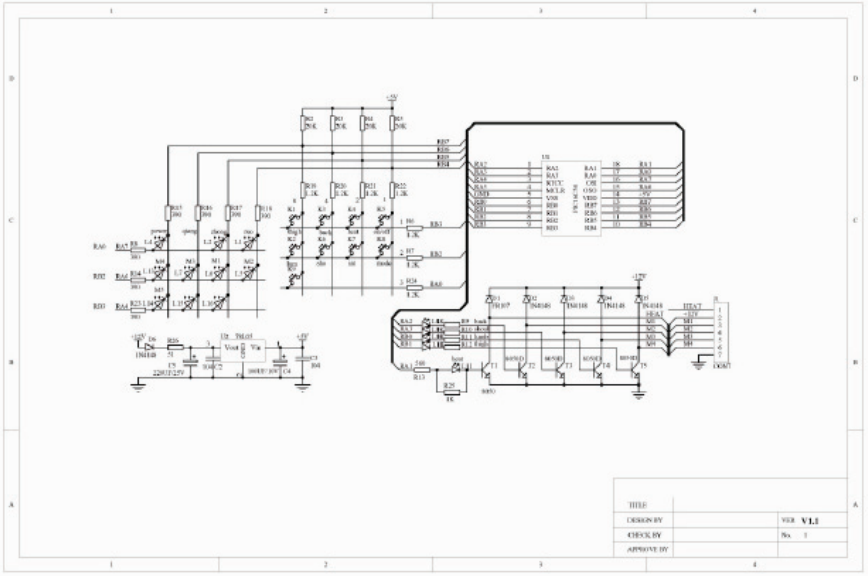

PREMIER®

***INSTRUCTION MANUAL***
***MASSAGE CUSHION WITH HEAT***
**MM-4140C**

## *DEAR CUSTOMER*

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.
If you need extra support, please write to ***info@premiermundo.com***



**CAUTION**

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

## *PREMIER CUSTOMER SERVICE*

| | |
|---|---|
| **Venezuela:** | 0800 – ELECTRIC (353-2874) |
| **Colombia:** | 01-900-331-PEJC (7352) |
| **Panama:** | 300-5185 |
| **Website** | www.premiermundo.com |
| **E-mail:** | servicioalcliente@premiermundo.com |

**NOTE**
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

## Important Safety Instructions

Please keep this instruction manual in a safe place, along with the carton for future reference. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Before turning on, ensure the electrical voltage and frequency of the circuit corresponds to those indicated on the adaptor.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not operate the appliance outdoors.
- The adaptor must be removed from power socket before cleaning, servicing, maintenance or moving the appliance.
- When the appliance is not in use, switch it off and unplug it.
- To reduce the risk of electrocution, never operate this product with wet hands, submerge under water or spill liquids into the product.
- Do not insert any objects into the massager.
- Do not kink or damage the power cord.
- Improper installation may result in the risk of fire, electric shock or injury to persons.
- The manufacturer is not responsible for any eventual damages caused by improper or faulty use.
- The unit has no user-serviceable parts contained within. Do not attempt to repair, disassemble or modify the appliance.
- Do not use chemical, steel wool or modify the appliance.
- Do not use chemical, steel wool or abrasive cleaners to clean the outside of the massager as these chemicals may damage the material.





## Important Safety Instructions

- The massager is intended for household use only. Do not use this appliance for anything other than its intended use.
- Do not operate the unit near liquids (kitchen sink, water basins, taps etc).
- Do not use this appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Never leave an appliance unattended while in use.
- Do not use your massager if it or its cord or controller has been damaged or if it is not working properly. Return your massager to Appointed Service Center for examination and/or repair.
- If you have any concerns regarding your health, consult your doctor before using the product.
- Individuals with pacemakers should consult a doctor before use.
- Never cover the appliance when it is in operation.
- Extensive use could lead to the product excessively heating and shorter product life span. Should this occur, discontinue use and allow the unit to cool before recommencing operation.
- Never use this product on swollen or inflamed areas or skin eruptions.
- This product is a non-professional appliance designed to provide soothing massage muscles.
- DO NOT use this product as a substitute for medical attention.
- DO NOT use this product before bed. The massage has a stimulating effect and can delay sleep.
- DO NOT use this product while in bed.
- This product should NEVER be used by any individual suffering from any physical ailment that would limit the user's capacity to operate the controls or who has sensory deficiencies in the lower half of their body.
- Do not use if wet.
- Do not use with a disabled person, infant or a person insensitive to heat without medical consultation first.
- Do not use when folded.

## Assembly Instructions

**NOTES:**

- **Do not setup the massager in a bathroom or similarly humid areas as such an environment may reduce the lifespan of the massager mechanism.**
- **Ensure the massager is not exposed to direct sunlight, placed near heaters or other hear sources.**
- **DO NOT use this product on any wooden surface as the zipper may cause damage.**

### Strapping System

The back massager incorporates a unique strapping system which allows you to fasten it to most any chair or auto seat. Set the cushion in your seat and adhere the elastic straps firmly around the seat back. Your massager won't slip or slide around.

### For Use in Home or Office

Plug adaptor into a 110 Volt AC outlet and plug the receptacle end into the input jack, located along the side if the cushion. Attach the massage cushion to any chair for a luxurious massage as you read, rest or even work.

### For Use in the Car

Simply plug the 12 volt auto adaptor into a cigarette outlet and plug the receptacle end into the input jack, located along the side of the cushion. Slip the massage cushion straps over your seat to enjoy a relaxing massage as you drive.

Product Specification:
Input: 12VDC 800MA
Power: 8.5W (When using AC adaptor)





## How to use your Portable Back & Seat Massager Remote Control

**Heat** button: Turns lumbar heater on/off

**Power** button: Turns massager on/off

**Intensity** button: Adjusts the strength of your massage. Choose from 3 levels of intensity.

**Mode button:** Cycles through the 4 different massaging modes, Pulsate Tapping, Rolling, Kneading and Auto Mode. Auto mode will automatically change through the various Massaging modes.

**Isolating your massage**: Customise your massage areas by choosing to turn on/off the various parts of the massager, Upper back, Lower back, Hips and Thighs.

**Timer button:** Choose between 15min, 30min and 60min settings.

## Care & Cleaning instructions

- Unplug the unit and allow it to cool before cleaning. Clean only with a soft, slightly damp sponge. Never allow water or any other liquids to come into contact with the unit.
- DO NOT immerse in any liquid to clean.
- Never use abrasive cleaners, brushes, gasoline, kerosene, glass/furniture polish or paint thinner to clean.

## CIRCUIT DIAGRAM